

LP 127 S2 / LP 147 S2

PIEZA N°	CÓDIGO	DESCRIPCIÓN	MODELO	CANT.X MAQ.
1	001301	TORN.TAPA CABEZAL LP	LP127-147S2	4
2	017108	ARAND.ESTRELLA LP	LP127-147S2	10
3	001302	TORN.TAPA CAB.INT. LP	LP127-147S2	3
4	123006	TUERCA DISCO LP	LP127-147S2	1
5	103002	EJE SALIDA LP	LP127-147S2	1
6	117006	CHAV.CORONA LP	LP127-147S2	1
7	110004	TAPA CABEZAL LP	LP127-147S2	1
8	017109	JUNTA TAPA CABEZAL LP	LP127-147S2	1
9	124002	FIELTRO TAPA LP	LP127-147S2	1
10	002008	ROD.SALIDA LP (6202)	LP127S2	1
11	017103	ARAND.TAPA LP	LP127-147S2	1
12	025108	PROTECTOR ROD.TAPA LP	LP127-147S2	1
13	104006	CORONA LP127S2	LP127S2	1
14	117008	ARAND.COMP.CAB.INT. LP	LP127-147S2	1
15	117010	ANILLO SEG.CAB.INT. LP	LP127-147S2	1
16	102002	ROD.AGUJAS LP (1210)	LP127-147S2	1
17	001303	TORN.CAB.CUERPO LP	LP127-147S2	4
18	112012	PERILLA TRABA DISCO LP	LP127-147S2	1
19	121004	RESORTE TRABA DISCO LP	LP127-147S2	1
20	110002	CABEZAL LP	LP127-147S2	1
21	120002	BUJE TRABA DISCO LP	LP127-147S2	1
22	027103	ORING TRABA DISCO LP	LP127-147S2	1
23	103004	PERNO TRABA DISCO LP	LP127-147S2	1
24	125002	CUBETA DEL.LP	LP127-147S2	1
25	002007	ROD.ROTOR DELANTERO LP (6201)	LP127S2	1
26	017107	ARAND.COMP.CAB.EXT. LP	LP127-147S2	1
27	117002	ANILLO SEG.CAB.EXT. LP	LP127-147S2	1
28	111002	DEFLECTOR LP	LP127-147S2	1
29A	106004	ROTOR C/VENT.LP127S2	LP127S2	1
29B	113002	VENTILADOR LP	LP127-147S2	1
30	001304	TORN.ESTATOR LP	LP127-147S2	2
31	112006	PROTECTOR ROD.LP	LP127-147S2	1
32	002002	ROD.ROTOR TRASERO LP (6000)	LP127-147S2	1
33	125004	CUBETA TRAS.LP	LP127-147S2	1
34	105004A	ESTATOR LP127S2	LP127S2	1
35	107002	CUERPO MOTOR LP	LP127-147S2	1
36	001305	TORN.TAPA ESCOBILLA LP	LP127-147S2	2
37	112008	TAPA ESCOBILLA LP	LP127-147S2	2
38	001306	TORN.PORTA ESCOBILLA LP	LP127-147S2	2
39	001307	TORN.ESCOBILLA LP	LP127-147S2	2
40	115002	ESCOBILLA (JUEGO) LP	LP127-147S2	1
41	116002	PORTA ESCOBILLA LP	LP127-147S2	2
42	023106	TUERCA ESCOBILLA LP	LP127-147S2	2
43/44	114004	TECLA SELECTORA 2V LP	LP127-147S2	1
45/47	019110	CONJUNTO CABLE-TECLA2V LP	LP127-147S2	1
46	119004	CONECTOR LP	LP127-147S2	1
48	108002	MANGO POSTERIOR LP	LP127-147S2	1
49	114002C	INTERRUPTOR LP	LP127-147S2	1
50	001002	TORN.MANGO POSTERIOR LP	LP127-147S2	4
51	001020	TORN.MANGO POST.CUERPO LP	LP127-147S2	4
52	112004	BOQ.PASACABLE LP	LP127-147S2	1
53	119002	CABLE SALIDA LP	LP127-147S2	1
54	126006	LLAVE PERNOS LP	LP127-147S2	1
55	126010	DISCO PLASTICO LP	LP127-147S2	1
	121002	RESORTE ESCOBILLA LP	LP127-147S2	2

	126008	MANGO AUXILIAR LP	LP127-147S2	1
	112010	RETEN LP	LP127-147S2	1

10	002008	ROD.SALIDA LP147S2 (6202)	LP147S2	1
13	104004	CONJ.PIÑON+CORONA AS209/LP147	LP147S2	1
25	002007	ROD.ROTOR DELANTERO LP147S2 (6201)	LP147S2	1
29A	106006	ROTOR C/VENT.LP147S2	LP147S2	1
34	105004B	ESTATOR LP147S2	LP147S2	1

29A	LP2001	ROTOR C/VENT.LP200S5	LP200S5	1
34	LP2002	ESTATOR C/P.TERM.LP200S5	LP200S5	1
37	LP2003	INTERRUPTOR C/PLAQ.LP200S5	LP200S5	1
48	LP2004	MANGO POSTERIOR LP200S5	LP200S5	1

LP 127 S2 - LP 147 S2_Explosión

